


Migro 154 Transmitter Version 2

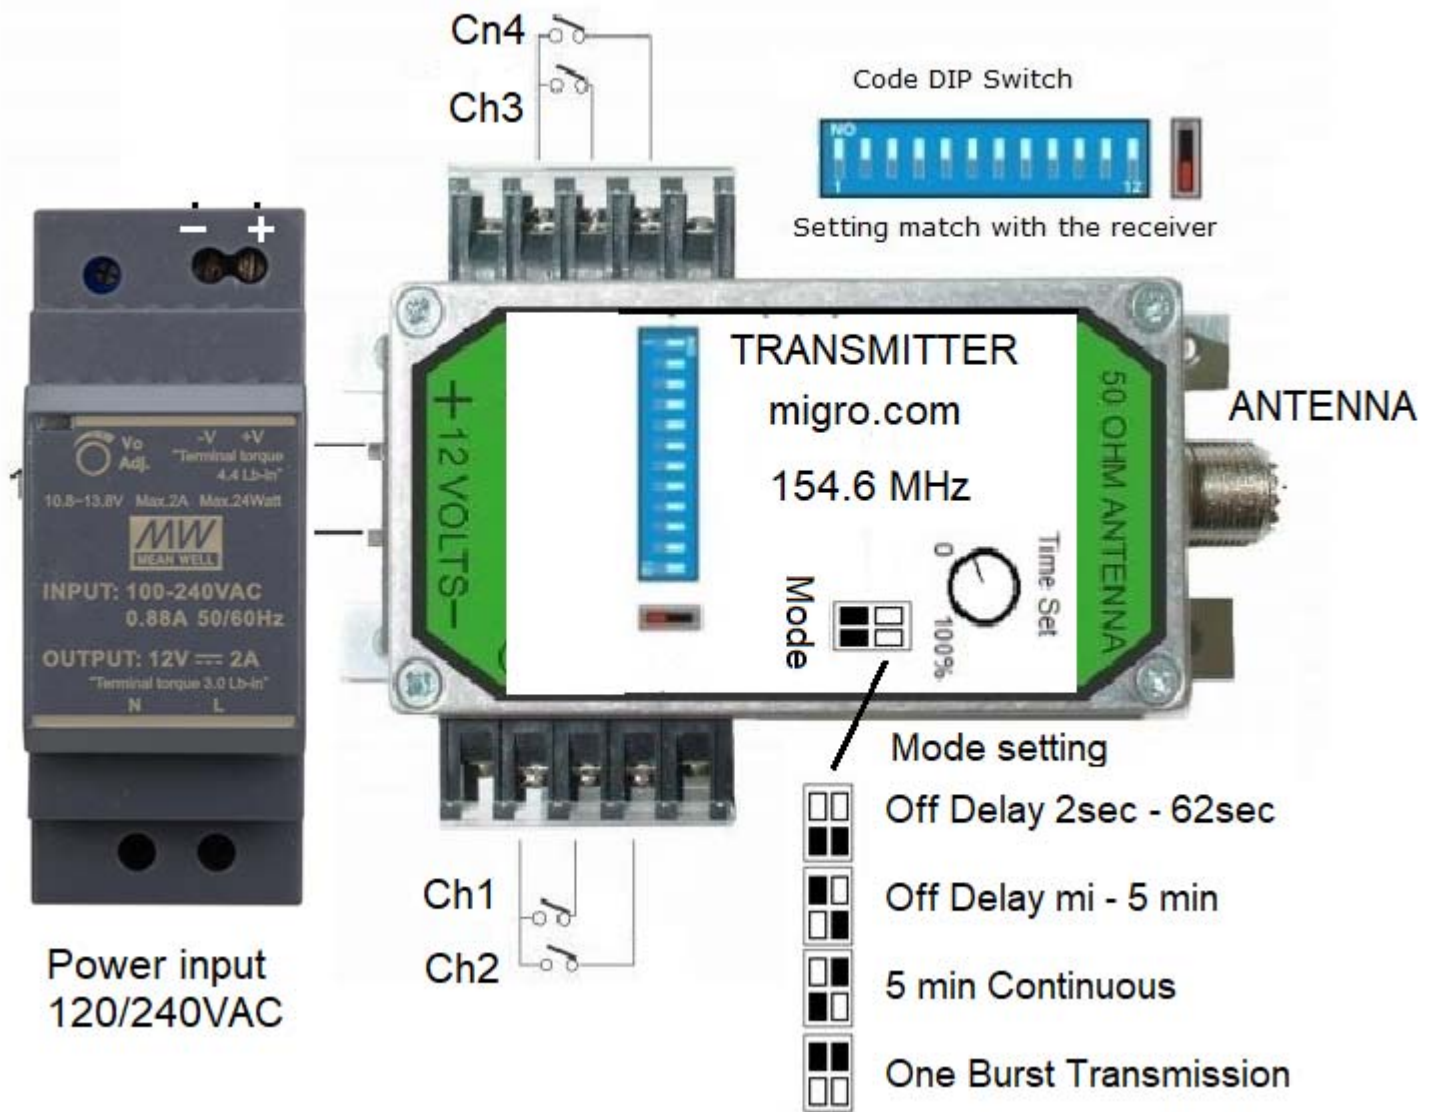

TEST the system before the installation ON a bench for proper setup and operation

Never operate the transmitter or receiver without the antenna.

Separate the Transmitter and Receiver at least 6 feet (2 meter) apart

Make sure the code on the DIP switch from the Transmitter matches the Receiver

To access the settings, "Remove the cover 4 screws"

NOTE: Transmitter and Receiver antennas shall be mounted facing the same vertical position, (same polarity pattern) even when there is no line of sight.



Warning: Radio control equipment in not to be used in life safety.
DISCLAIMER: Contact a licensed professional for your project.