

TEST the system before the final installation ON a bench for proper setup and operation

- 1 Select the operating frequency (See the transmitter and receiver manual)
Usually the frequency is already preset by the manufacturer to match the receiver
- 2 The numeric keypad is assigned to the channel to be activated at the receiver
1 = Channel 1, 2 = Channel 2, 3 = Channel 3, 4 = Channel 4
- 3 To test the system, make sure the transmitter and receiver are ON

FCC Note:

You can select your own frequency to operate your system; FCC restriction may apply if the operating frequency is not in the free MURS band

Portable Transmitter operation

Push the PT button and Hold,
Push momentarily (3 seconds) the desired channel on the keypad
and release PT button

On the Receiver a relay will energize of your selected channel



PT button



Numerical Keypad



NOTE: Receiver Output Relay
Pulse output at each channel

Optional 934135
Time or Latch
output Controller



Power